



Privvy Toilet Tent

Instructions



Thank you for purchasing your Kampa tent. Please read these instructions carefully before attempting to set up your tent and retain for future reference. If used properly, your tent should give you years of trouble free use. Tents contain a high proportion of synthetic materials and under certain conditions will be affected by condensation inside the tent. This should not be confused with leaking and condensation can be improved by ensuring adequate ventilation.

We recommend a trial run before using your tent for the first time. This will allow you to familiarise yourself with the tent, its set up and any limitations the tent may have for your particular use.

PARTS LIST

Before using for the first time, ensure that the following parts are present:

Tent flysheet with top cap attached at one corner	1
Fibreglass shock corded poles - long for leg	4
Fibreglass shock corded poles - short for base	4
Groundsheet	1
Peg bag	1
Carry Bag	1

If any parts are missing please contact your supplying retailer immediately.

SITING

Choose a site that is flat and, if possible, protected from the wind. Try to clear the site of sharp stones to avoid damaging the tent during set up. Try to set up your tent with the door facing away from the wind. Avoid pitching under trees as falling branches, sap, etc could damage your tent.

SET UP

To protect your tent from dirt and damage, it may be beneficial to lay a groundsheet down before unpacking. Unpack the tent and separate and identify the different parts. Assemble the flexible poles; these are shock corded together and just need slotting together, ensuring that each pole is fully inserted into the adjoining metal ferrule. There are four long leg poles and 4 shorter base poles. Spread the flysheet out on the ground. Locate the bottom of the four pole sleeves on the flysheet. Thread the long poles into the bottom end of each of these four sleeves. Always push the poles through the sleeves - do not pull. At the top end of the sleeves undo the velcro flaps exposing the roof poles. Push the leg pole into the roof poles and then close the velcro flaps. Go to the base of the tent and at each corner you will find a small pocket. Insert the end of each leg pole into its respective pocket.

Stand the tent upright, pulling it into shape as necessary. Open the door and take the four short base poles into the tent. Insert one base pole between each corner, inserting each end into the pockets at the corners, to form a square base. There is a velcro tab in the centre of each side that should be fastened around each of the base poles. Close the door and peg the toilet tent down at the corners, ensuring good even tension between the four corners.

Go back outside and hook the top cap to the other three attachment points.

Take the groundsheet inside the tent. You will notice that it is formed like a tray. Place it in the base of the tent and attach it, using the velcro, at each corner.

The tent comes with pre-attached guy lines. We recommend that these guy lines are used at all times. Peg the guy lines so that the tent is under tension without distorting the shape. The guy lines can be adjusted using the runners.

RAIN

We make our tents as resistant to the weather as possible. Occasionally you may find slight leakage. This is not a fault with the manufacturing process or materials and can normally be rectified by spot treating the seam with seam sealant. We recommend McNett Seamseal.

SUITABILITY

This tent is designed for use in light to moderate weather. During very strong winds or snowfall we recommend that you take your tent down. The tent is designed for occasional use; it is not designed for static or commercial use.

UV DEGRADATION

Tent fabrics can be weakened by prolonged exposure to sunlight. Under normal holiday use your tent will give long service but use for extended periods in strong sunlight will soon cause deterioration. In those cases it would be wise to use a site as shaded as possible. UV degradation is not covered under the warranty. The warranty does not cover tents used on permanent sites, displays or for commercial purposes.

CONDENSATION

Tents contain a high proportion of synthetic materials and under certain conditions will be effected by condensation inside the tent. **This should not be confused with leaking.** Condensation can be improved by ensuring adequate ventilation. Condensation and its effects are not covered under the warranty.

SAFETY

DO NOT COOK IN THE TENT OR USE NAKED FLAMES. READ AND UNDERSTAND THE FIRE PRECAUTIONS LABEL SEWN INTO THE INSIDE OF THE TENT.

DISMANTLING

Reverse the set up procedure. Push the poles out of the sleeves, do not pull. Ensure that all parts are clean before packing in the carry bag. If the tent is wet or damp, dry fully as soon as possible.

CARE

Tents are best stored opened out. Air fully and ensure it is totally dry before packing away. Store in a well ventilated dry place. A wet/damp tent will develop mildew surprisingly quickly. Dirty tents can be washed using clean water and a soft brush. Do not scrub and never use detergents.

Poles should be protected from damage and should be stored completely dry to prevent corrosion of the ferrules. Damage due to improper use, wind damage or neglect is not covered under the warranty. Have any damage repaired at the first opportunity. Failure in the poles normally occurs through incorrect use. Make sure that poles sections are fully inserted into their adjoining pole and do not over stress the pole beyond its designed curve. You can purchase replacement poles from your dealer.

Zips should be treated with care, use two hands to close and open and never tread on them. Never force a zip.

We strongly recommend that you carry a comprehensive spares kit including silicone waterproof spray, seam sealer, tape for repairing split poles, and spare guy ropes and pegs for extreme weather.

Repairs should be made by a company recommended by Kampa or your supplying dealer. Repairs and alterations made by an unauthorised company may invalidate your warranty.

WARRANTY

We guarantee this product from manufacturing defects for twelve months from date of purchase. The guarantee does not cover slight leakage, condensation, UV degradation, storm/weather damage, improper use, improper set up, permanent use, commercial use, displays or modification. Any complaint should be made to your supplying dealer with the original receipt. Please ensure that your tent is dry and clean before returning to your dealer for inspection. Your dealer may refuse to handle any tent that is returned in an unsuitable condition. Spare parts can be purchased from your dealer.

Kampa also produce a wide range of quality camping and caravan accessories that are available from your dealer. You can see our full range at www.kampa.co.uk

Kampa UK Limited
Witham
CM8 3EU

